

## **Description**

JM TPO Peel & Stick Walkpad is a  $\frac{5}{32}$ " (3.97 mm) thick, textured thermoplastic walkpad with a release liner for self adhering to JM TPO Membrane.

## Use

Use to protect the roofing membrane system in high rooftop traffic areas such as rooftop units that require regular maintenance.

## Color

Grey

## **Physical Properties**

Weight/pad	3.25 lb/ft <sup>2</sup> (16 kg/m <sup>2</sup> )
Thickness	
Walkpad Size	30" x 30" (762 mm x 762 mm)

# Gross Coverage

187.5 ft<sup>2</sup> (17.42 m<sup>2</sup>) per box

## Packaging


30 pads/box

## Storage

Store in a dry area protected from extreme temperatures and physical damage.

## Installation

- Clean the JM TPO Membrane surface with JM TPO Primer. Simply apply the primer to the roof membrane and clean intended roof walkway area using a scrubbing pad. Make sure the primer is completely dry before positioning the JM TPO Peel & Stick Walkpad.
- 2. Start by selecting a precut JM TPO Peel & Stick Walkpad, leaving the release liner in place. Align the walkpad in the direction of the intended walkpad application.
- Pull back one side of the walkpad and carefully cut the release liner approximately 12" (305 mm) from the end in the cross direction; be careful not to cut the walkpad itself.

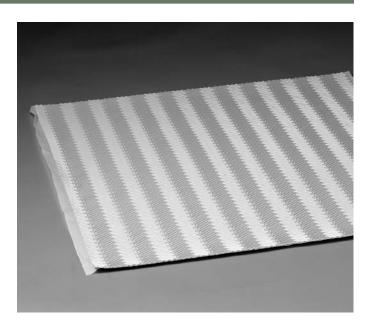

- 4. Peel back the smaller section of the release liner in the opposite direction of the intended walkpad application, exposing the back side adhesive. Affix exposed adhesive side to the JM TPO Membrane.
- Next, pull back the pad to expose the remaining release liner. Pull on the release liner in the direction of the intended pad application. At the same time, press on the walkpad to adhere it to the membrane, leaving the applied JM Peel & Stick Walkpad behind.
- 6. Walk over the entire walkpad surface to ensure complete adhesion to the roof surface.

Install JM TPO products in accordance with current JM TPO Applicator Guides or Detail Drawings.

Refer to the Material Safety Data Sheet prior to using JM TPO Peel & Stick Walkpads. The Material Data Safety Sheet is available by calling (800) 922-5922 or on the Web at www.jm.com/roofing.