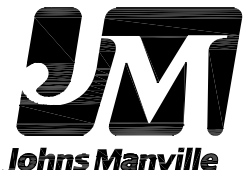


NOTES:

1. REFER TO JOHNS MANVILLE WEBSITE (www.jm.com) FOR MOST UP-TO-DATE INFORMATION.
2. PLEASE SEE SINGLE PLY FLASHING SPECIFICATIONS FOR A FULL DESCRIPTION OF INSTALLATION INSTRUCTIONS AND REQUIREMENTS WHICH ARE CONSIDERED A PART OF THIS DETAIL.
3. ANY CARPENTRY OR METAL WORK SHOULD BE DESIGNED AND CONSTRUCTED IN ACCORDANCE WITH LOCAL CODE REQUIREMENTS AND/OR PROJECT SPECIFICATIONS. THESE COMPONENTS SHOULD BE REVIEWED AND APPROVED BY A LICENSED DESIGN PROFESSIONAL.
4. CLEAN MEMBRANE SURFACE PRIOR TO ENRGY ANCHOR INSTALLATION WITH JM SINGLE PLY MEMBRANE CLEANER.
5. JM EPDM TAPE PRIMER MUST BE APPLIED ON ALL SURFACES COMING INTO CONTACT WITH JM EPDM PEEL & STICK PRODUCTS. ROLL THE ENTIRE TARGET PATCH WITH A HAND ROLLER UNDER PRESSURE.
6. DO NOT INSTALL ENERGY ANCHORS OVER MEMBRANE SEAMS.

DRAWING NO.		JM ENRGY ANCHOR - EPDM		
E-PT-09		MEMBRANE TYPE: JM EPDM		
NEW DETAIL		MAXIMUM GUARANTEE TERM:		
SCALE	ISSUE DATE	<small>Johns Manville is a manufacturer of commercial roofing products and offers this general conceptual information to you as a courtesy. This complimentary assistance is not to be used or relied upon by anyone as a substitute for professional engineering design and documentation required by building code, contract, or applicable law. By accepting these comments you agree they do not constitute any representations, endorsements of, or an assumption by Johns Manville of any liability for either the adequacy of the design of this building or any other material not supplied by Johns Manville.</small>		
N.T.S	10-17-17			