


General Application Instructions

Installation instructions must be followed exactly in the order of steps as indicated. NOTE: JM TPO CleanSheet™ Protective Film covers the entire length of the JM TPO membrane with the exception of a portion of the side lap, which is left exposed for welding.

STEP 1.


Unroll and install a first roll of JM TPO CleanSheet™ roofing membrane over the roofing substrate, per your selected installation method.

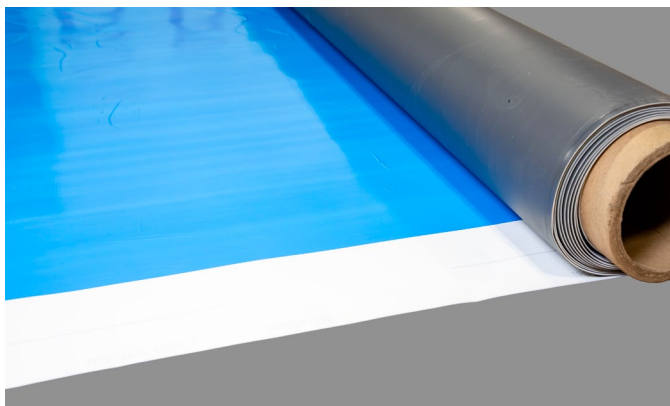

STEP 2.

Unroll and position additional roofing membrane rolls adjacent to the initial membrane, ensuring that only the exposed side lap is overlapped by the adjoining membrane (typically 3" or 6", depending on the system requirements).

Weld the overlapped membrane areas in accordance with best practices outlined in the JM TPO Installation Guidelines.

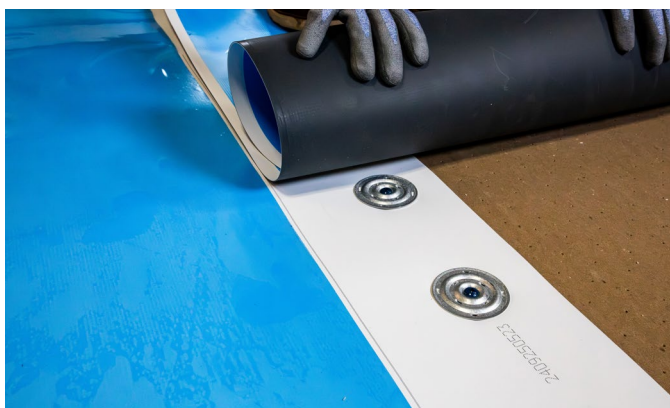

STEP 3.

At end laps, unroll and position a second roofing membrane over the substrate so that it overlaps the first membrane by approximately 3" for smooth TPO systems. Carefully pull back enough of the monolayer protective sheet from the first membrane at the overlap area to ensure direct, intimate contact between the exposed first membrane and the underside of the second membrane. Weld the overlapped areas of the first and second membranes in accordance with established best practices.

STEP 4.

After roof installation is complete, remove the JM TPO CleanSheet™ protective monolayer sheet from the JM TPO membrane within 90 days.



Flashing Details

Carefully measure and cut the protective film around penetrations and detail areas to ensure proper fit and coverage. Proceed with flashing installation in accordance with the JM TPO Installation Guidelines.

