



# GoBoard® Washers



*For use with 1/4" and 1/2" GoBoard®LT waterproof tile backer board*

1 1/4" diameter hardened galvanized steel washer for maximum holding strength and durability

Fastener head recess to accommodate Hi-Lo fastener head

Tabs for pre-positioning washer prior to installing Hi-Lo fasteners

Reversed tab prevents washers from stacking in package




- 1 1/4" diameter hardened steel washer for maximum holding strength and durability.
- Tabs for pre-positioning washers prior to installing.
- Reversed tab prevents washers from stacking in package.
- Install GoBoard® Washers every 12 inches.
- Corrosion resistant.
- Comes in combo packs of 100 washers with fasteners for wood or steel studs.

## 1 1/4" Washers 1 5/8" Hi-Lo Fasteners for use with Wood Studs

- Attaches 1/4" and 1/2" thick GoBoard LT to wood studs and subfloors.
- Hi-Lo threads for increased holding power and reduced driving torque.

Hi-Lo threads for increased holding power and reduced driving torque

#2 Phillips

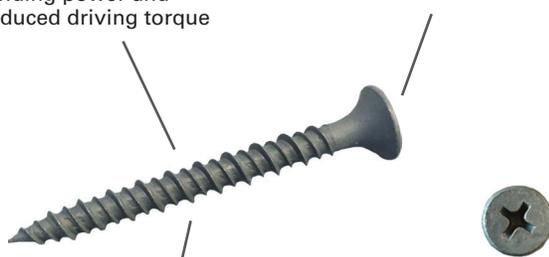

1 5/8" length for use with 1/4", and 1/2" GoBoard®LT

## 1 1/4" Washers 1 5/8" Self-Drilling Fasteners for use with Steel Studs

- Attaches 1/4" and 1/2" thick GoBoard LT to steel studs.
- Self-drilling tip meeting SAE J78 hardness and timed test requirements.

Self-drilling tip meeting SAE J78 hardness and timed test requirements

#2 Phillips




1 5/8" length for use with 1/4", and 1/2" GoBoard®LT

### Installation Tips

- Cut GoBoard LT with a utility knife.
- Install GoBoard LT with 1/8" gaps between all boards.
- Install GoBoard Washers every 12 inches in interior areas first, avoiding board joints initially.

- Seal all joints prior to installing GoBoard Washers over joints to ensure proper seal underneath washer.
- Seal all GoBoard Washer locations.
- Begin tiling when GoBoard Sealant skins over.
- Grout the next day.


# GoBoard® Washer Installation Instructions

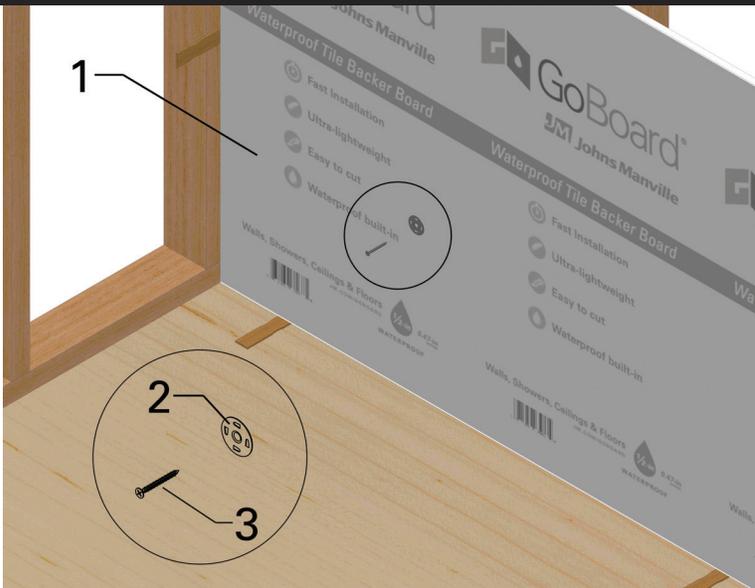


1. Position GoBoard LT. Use shims or spacers to ensure 1/8" gaps.
2. Place first GoBoard Washer approx. 12" from edge (push washer into GoBoard LT surface).
3. Install the provided Hi-Lo or Self-Drilling fastener.



4. Install remaining washers spaced 12" apart in the interior area (field) of board. To ensure a waterproof installation, GoBoard Washers should only be installed around board perimeters AFTER GoBoard Sealant has been applied.

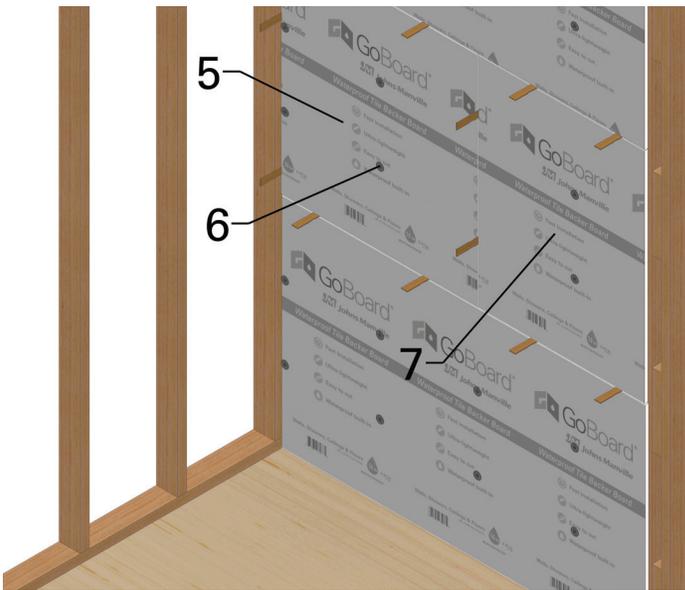

5. Position next board; use spacers to ensure 1/8" gaps.
6. Repeat steps 2 thru 4 to install GoBoard Washers.
7. Install additional boards until wall is covered with GoBoard LT.

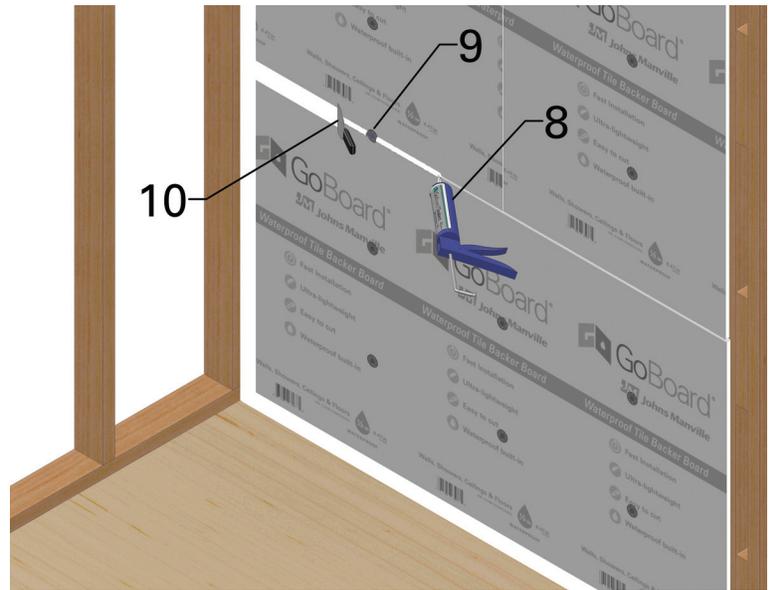

8. Fill 1/8" gaps with GoBoard Sealant or equivalent.
9. Repeat steps 2 thru 4 to install washers over joints.
10. Using a putty knife, spread excess sealant 1" on either side of joint. Apply more sealant as needed.
11. Apply sealant over each washer.
12. Using a putty knife, spread sealant to completely cover washer with sealant. Apply more sealant as needed.



Cover adjacent walls with GoBoard LT repeating steps 1 thru 12.

Once all boards are installed, begin tiling when GoBoard Sealant has formed a suitable skin layer, which is usually 30 to 60 minutes depending on ambient conditions. In dryer climates or when installing at colder temperatures, GoBoard Sealant will take longer to skin over.

[www.JM.com/Canada/GoBoardLT](http://www.JM.com/Canada/GoBoardLT)